



INSTALLATION STEPS:

- 1: APPLY APPROPRIATE ROOF MEMBRANE BONDING ADHESIVE OVER SUBSTRATE AND CONTINUE IT ONTO PREVIOUSLY INSTALLED CCW 705 AIR BARRIER (ALL CCW 705 OPTIONS ARE ACCEPTABLE) 2" (51mm) AND ALLOW IT TO FLASH OFF ACCORDING TO SPECIFIC ADHESIVE INSTALLATION INSTRUCTIONS.
  
- 2: INSTALL EPDM/TPO ROOF MEMBRANE, EXTENDING IT A MINIMUM OF 3" (76mm) OVER THE PREVIOUSLY INSTALLED CCW 705 AIR BARRIER. CUT ROOF MEMBRANE AS STRAIGHT AS POSSIBLE TO HELP WITH ALIGNMENT OF TERMINATION BAR. ROLL OVERLAP WITH 2" HAND ROLLER TO ENSURE FULL ADHESION. ENSURE THE LAST 1" (26mm) OF THE ROOF MEMBRANE IS NOT ADHERED TO ALLOW APPLICATION OF WATER CUT-OFF MASTIC HIGHLIGHTED IN STEP 3.
  
- 3: APPLY A CONTINUOUS BEAD OF WATER CUT-OFF MASTIC A MINIMUM OF 1/2" (13mm) IN DIAMETER BETWEEN THE FACE OF THE CCW 705 AND UNDERSIDE OF THE SINGLE-PLY ROOF MEMBRANE. MASTIC SHALL BE APPLIED DIRECTLY IN LINE WITH PLANNED TERMINATION BAR LOCATION.
  
- 4: WHILE MASTIC IS STILL WET, INSTALL TERMINATION BAR OVER SINGLE-PLY MEMBRANE, SANDWICHING THE MASTIC BETWEEN THE ROOF MEMBRANE AND THE CCW 705. TERMINATION BAR SHALL BE FASTENED WITH APPROVED FASTENERS SPACED A MINIMUM OF 12" (305mm) ON CENTER. FASTENERS SHALL PENETRATE THROUGH THE BEAD OF WATER CUT-OFF MASTIC TO ENSURE A WATER AND AIR TIGHT SEAL.

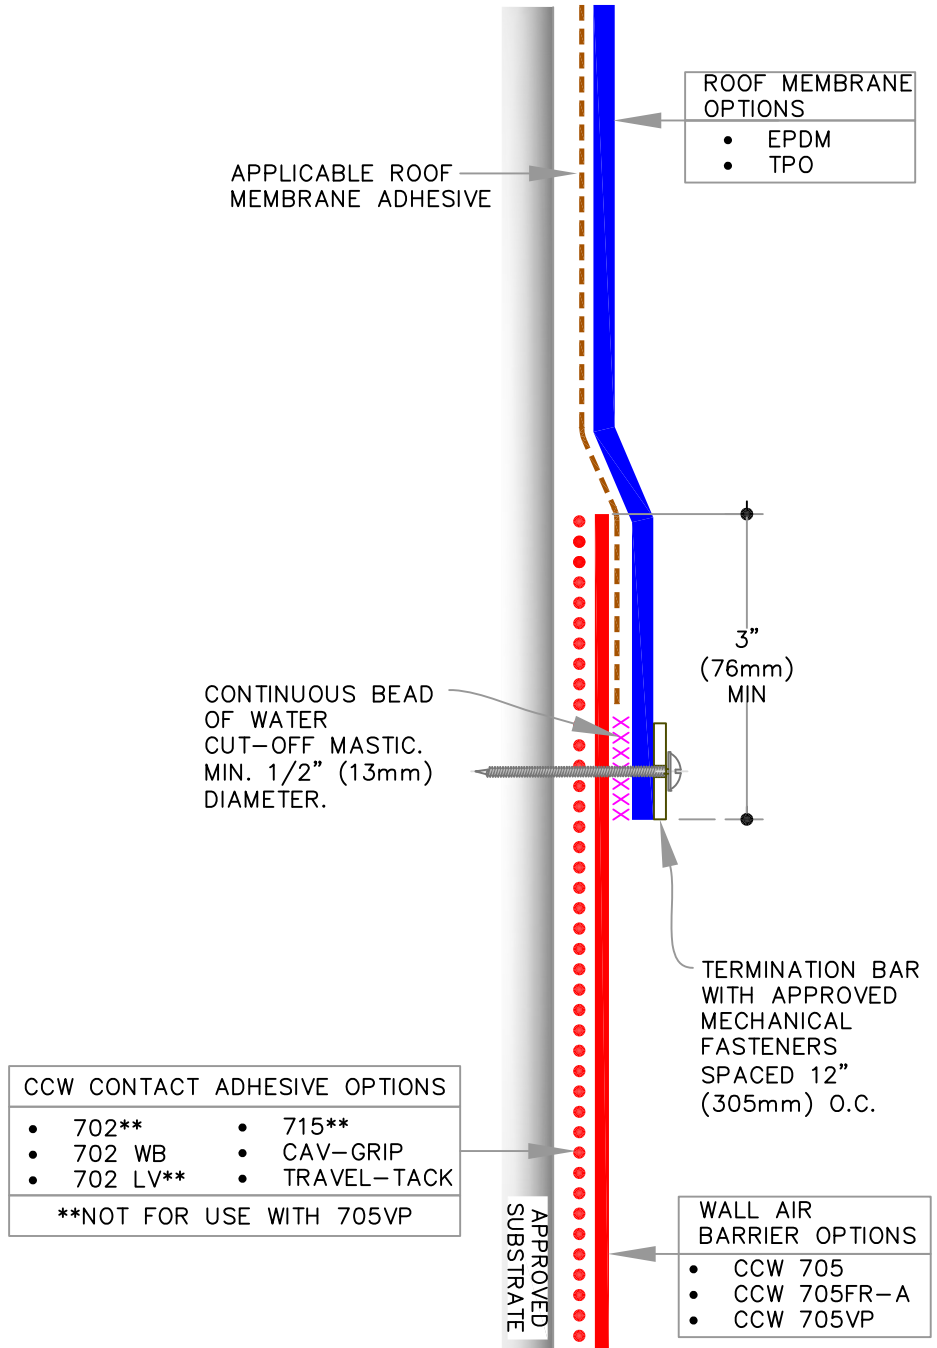

THIS DETAIL DEPICTS PRODUCTS COMPATIBILITY ONLY. FOR COMPLETE ROOF-TO-WALL TIE-IN, PLEASE SEE [SECTION 4](#).

	<div style="border: 1px solid black; padding: 2px; display: inline-block;">0</div> REFER TO NOTES	ROOF BARRIERS:	WALL BARRIERS:	1.1
		EPDM OR TPO	705, 705FR-A OR 705VP	
REFER TO SPECS FOR ADDITIONAL INFORMATION				