


INSTALLATION STEPS:

- 1: SINGLE-PLY ROOF MEMBRANE AND CCW 705 (NON-PERMEABLE OPTIONS ONLY) SHALL BE INSTALLED SO THAT THEY BUTT END-TO-END. INSTALLATION SHALL BE DONE ACCORDING TO APPLICABLE PRODUCT INSTALLATION REQUIREMENTS USING APPLICABLE ADHESIVES.
- 2: PRIME THE FACE OF THE CCW 705 AND THE SINGLE-PLY ROOF MEMBRANE WITH APPROPRIATE SINGLE-PLY PRIMER FOLLOWING SPECIFIC PRIMER INSTALLATION INSTRUCTIONS.
- 3: INSTALL A MINIMUM 6" (153mm) WIDE UNCURED EPDM PRESSURE SENSITIVE FLASHING OVER PRIMED BUTT JOINT, ENSURING FLASHING IS CENTERED, EXTENDING A MINIMUM OF 3" (76mm) ON TO BOTH THE SINGLE-PLY ROOF MEMBRANE AND THE CCW 705. INSTALLATION IS ACHIEVED BY REMOVING THE RELEASE LINER AND USING HAND PRESSURE TO POSITION THE EPDM FLASHING. ONCE IN PLACE, ROLL ENTIRE TIE-IN WITH WITH A 2" HAND ROLLER TO ENSURE PROPER ADHESION.

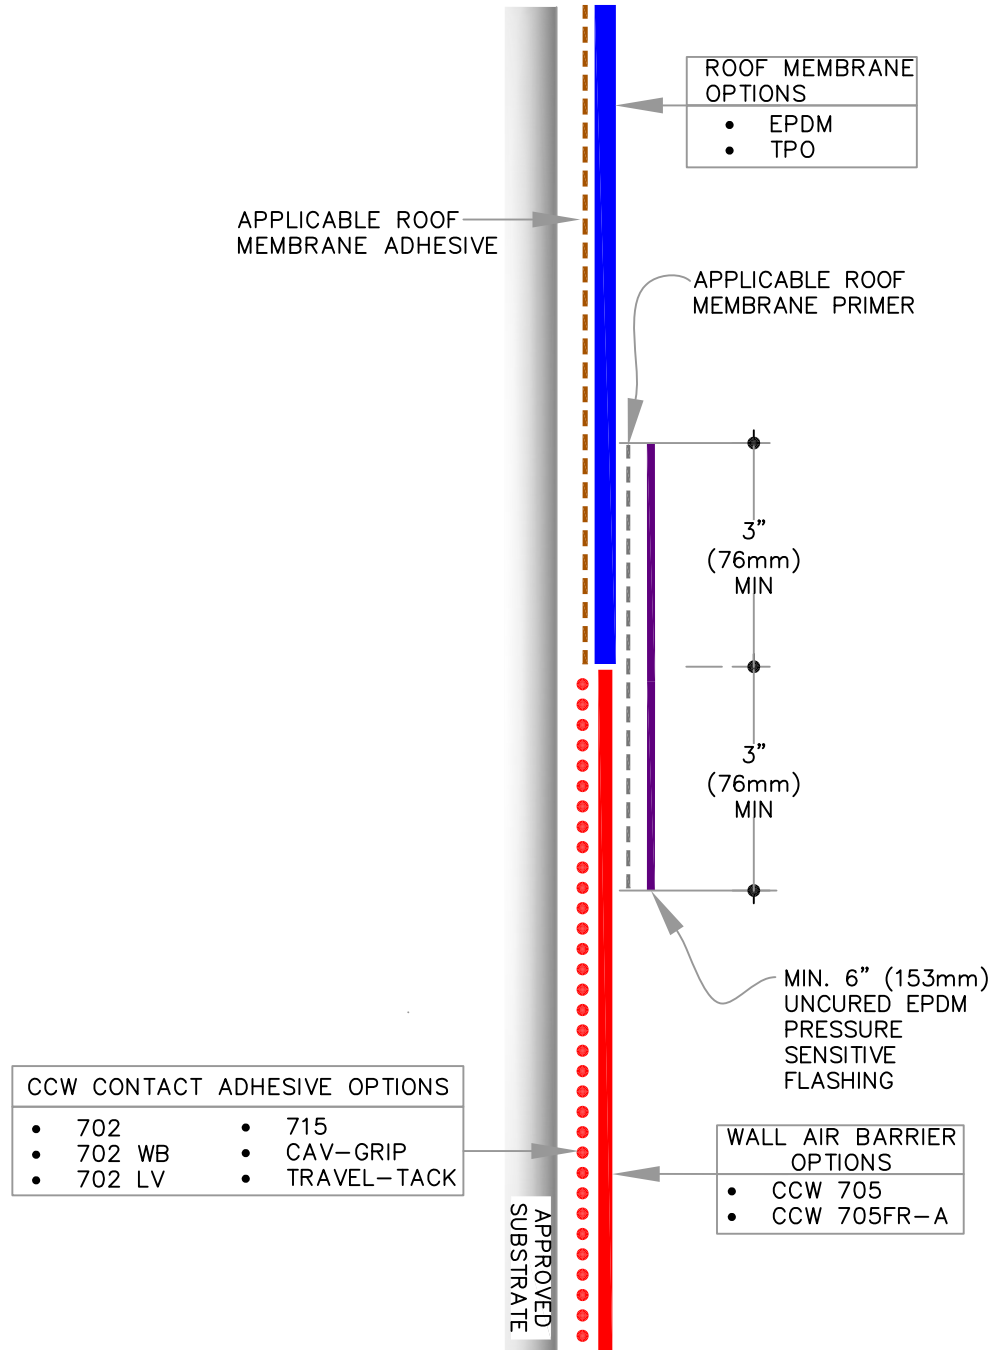

THIS DETAIL DEPICTS PRODUCTS COMPATIBILITY ONLY. FOR COMPLETE ROOF-TO-WALL TIE-IN, PLEASE SEE [SECTION 4](#).

	<div style="border: 1px solid black; padding: 2px; display: inline-block;">0</div> REFER TO NOTES	ROOF BARRIERS:	WALL BARRIERS:	1.2
		EPDM OR TPO	705 OR 705FR-A	
REFER TO SPECS FOR ADDITIONAL INFORMATION				