
INSTALLATION STEPS:

- 1: INSTALL A MINIMUM OF 6" (153mm) WIDE STRIP OF CCW 705 OR 705FR-A OVER PRIMED SUBSTRATE, CENTERED DIRECTLY BELOW THE PLANNED TIE-IN LOCATION. REMOVE RELEASE LINER AND PRESS INTO PLACE. ROLL TRANSITION MEMBRANE WITH 2" HAND ROLLER.
- 2: APPLY A CONTINUOUS BEAD OF CCW
 BARRIBOND OR LM-800XL DETAIL SEALANT AT
 TRANSITION MEMBRANE STEP-OFF WHERE
 BARRITECH OR BARRISEAL WILL BE INSTALLED.
 BEAD SHALL BE TOOLED TO A MINIMUM OF 1"
 (26mm) WIDE BY 40 MILS THICK AND
 ALLOWED TO DRY ACCORDING TO INSTALLATION
 INSTRUCTIONS.
- 3: APPLY CCW BARRITECH, BARRISEAL OR BARRITHANE ON THE WALL, CONTINUING IT 2" (51mm) ONTO TRANSITION MEMBRANE.
- 4: INSTALL EPDM/TPO ROOF MEMBRANE,
 EXTENDING IT A MINIMUM OF 3" (76mm) OVER
 CCW 705 TRANSITION MEMBRANE. CUT ROOF
 MEMBRANE AS STRAIGHT AS POSSIBLE TO
 HELP WITH ALIGNMENT OF TERMINATION BAR.
 ROLL OVERLAP WITH 2" HAND ROLLER TO
 ENSURE FULL ADHESION. ENSURE THE LAST
 1" (25mm) OF THE ROOF MEMBRANE IS NOT
 ADHERED TO ALLOW APPLICATION OF WATER
 CUT-OFF MASTIC HIGHLIGHTED IN STEP 5.
- 5: APPLY A CONTINUOUS BEAD OF WATER CUT-OFF MASTIC A MINIMUM OF 1/2" (13mm) IN DIAMETER BETWEEN THE FACE OF THE CCW 705 TRANSITION MEMBRANE AND UNDERSIDE OF THE SINGLE-PLY ROOF MEMBRANE. WATER CUT-OFF MASTIC SHALL BE APPLIED DIRECTLY IN LINE WITH PLANNED TERMINATION BAR LOCATION.
- 6: WHILE MASTIC IS STILL WET, INSTALL
 TERMINATION BAR OVER SINGLE-PLY
 MEMBRANE, SANDWICHING THE MASTIC
 BETWEEN ROOF MEMBRANE AND THE CCW 705
 TRANSITION MEMBRANE. TERMINATION BAR
 SHALL BE FASTENED WITH APPROVED
 FASTENERS AT A MINIMUM OF 12" (305mm)
 ON CENTER. FASTENERS SHALL PENETRATE
 THROUGH THE BEAD OF WATER CUT-OFF
 MASTIC TO ENSURE A WATER AND AIR TIGHT
 SFAL.

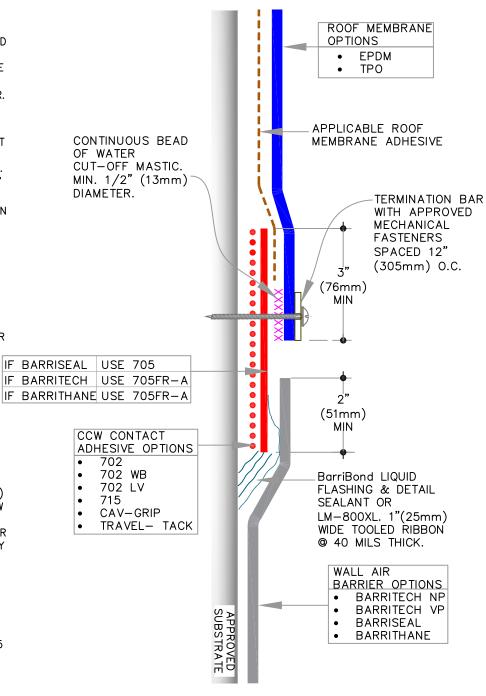

BARRITHANE

THIS DETAIL DEPICTS PRODUCTS COMPATIBILITY ONLY. FOR COMPLETE ROOF-TO-WALL TIE-IN, PLEASE SEE SECTION 4.					
		0	ROOF BARRIERS:	WALL BARRIERS:	
	NYELOP* SULLDING BRYELOPE SOLUTIONS	REFER TO NOTES	EPDM OR TPO	BARRITECH, BARRISEAL OR	1.4

REFER TO SPECS FOR ADDITIONAL INFORMATION