



INSTALLATION STEPS:

- 1: INSTALL A MINIMUM 6" (153mm) WIDE STRIP OF CCW 705 OR 705FR-A OVER PRIMED SUBSTRATE, CENTERED DIRECTLY BELOW THE PLANNED TIE-IN LOCATION. REMOVE RELEASE LINER AND PRESS INTO PLACE. ROLL TRANSITION MEMBRANE WITH 2" HAND ROLLER.
- 2: INSTALL SINGLE-PLY ROOF MEMBRANE FOLLOWING APPLICABLE INSTALLATION INSTRUCTIONS ENSURING MEMBRANE BUTTS TO THE PREVIOUSLY INSTALLED CCW 705 OR 705FR-A TRANSITION MEMBRANE.
- 3: APPLY A CONTINUOUS BEAD OF CCW BARRIBOND OR LM-800XL DETAIL SEALANT AT TRANSITION MEMBRANE STEP-OFF WHERE BARRITECH OR BARRISEAL WILL BE APPLIED. BEAD SHALL BE TOOLED TO A MINIMUM OF 1" (26mm) WIDE BY 40 MILS THICK AND ALLOWED TO DRY ACCORDING TO INSTALLATION INSTRUCTIONS.
- 4: APPLY CCW BARRITECH, BARRISEAL OR BARRITHANE ON THE WALL, CONTINUING IT 2" (51mm) ONTO CCW 705 OR 705FR-A TRANSITION MEMBRANE.
- 5: AT REMAINING TRANSITION MEMBRANE STEP-OFF, APPLY APPLICABLE SINGLE-PLY MEMBRANE PRIMER 3" (76mm) ON TO THE FACE OF THE CCW 705 TRANSITION MEMBRANE AS WELL AS 3" (76mm) ON TO THE EPDM OR TPO. ALLOW PRIMER TO FLASH OFF ACCORDING TO SPECIFIC PRIMER INSTALLATION INSTRUCTIONS.
- 6: INSTALL A MINIMUM 6" (153mm) WIDE UNCURED EPDM PRESSURE SENSITIVE FLASHING OVER PRIMED BUTT JOINT, ENSURING COVERSTRIP IS CENTERED, EXTENDING A MINIMUM OF 3" (76mm) ON TO BOTH THE CCW 705 TRANSITION MEMBRANE AND THE EPDM/TPO ROOF MEMBRANE. REMOVE RELEASE LINER AND PRESS INTO PLACE. ONCE IN PLACE, ROLL ENTIRE TIE-IN WITH 2" HAND ROLLER TO ENSURE FULL ADHESION.

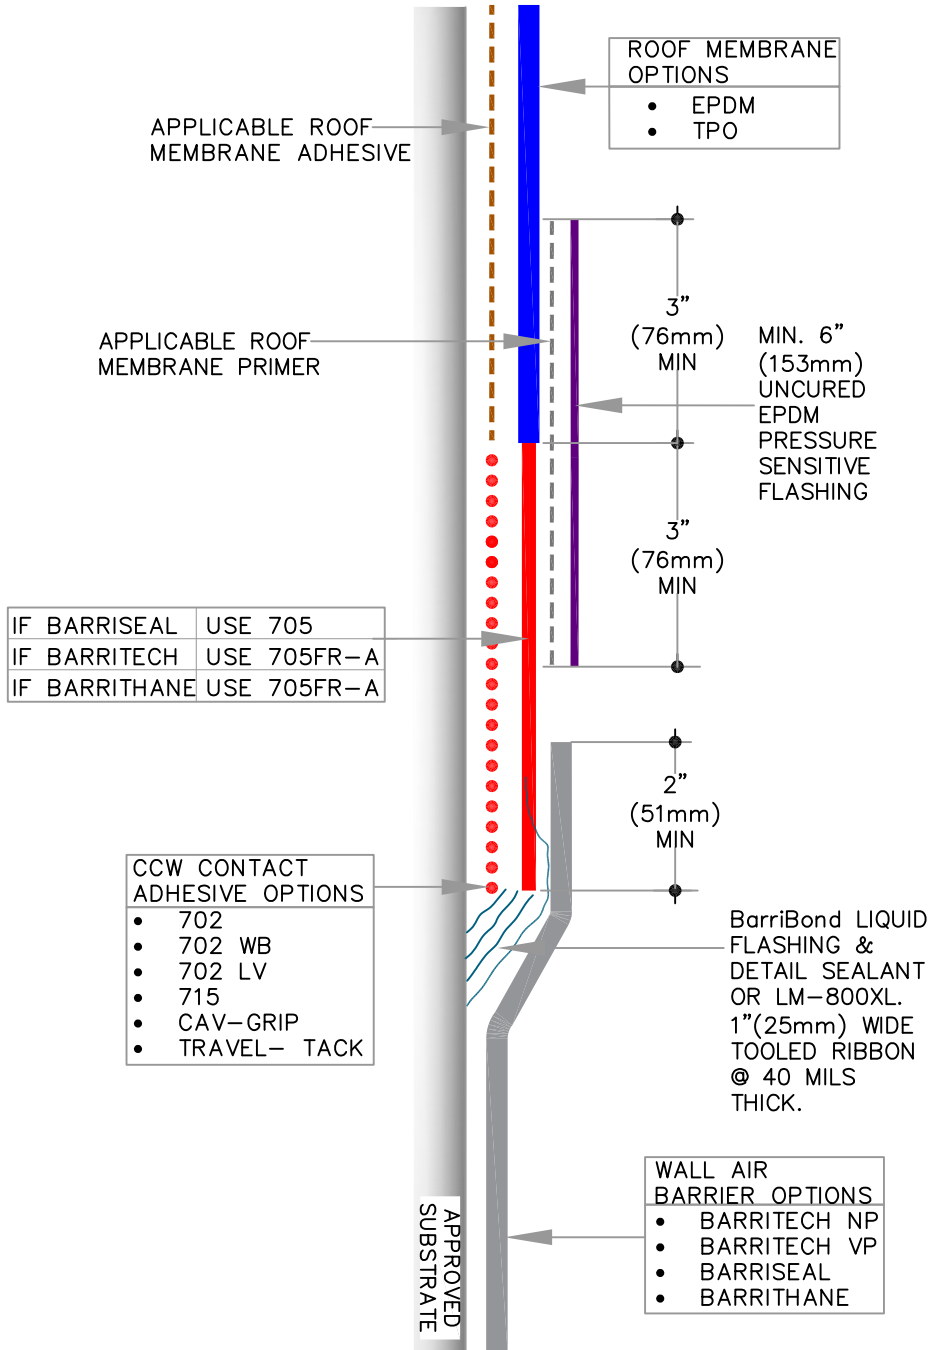

THIS DETAIL DEPICTS PRODUCTS COMPATIBILITY ONLY. FOR COMPLETE ROOF-TO-WALL TIE-IN, PLEASE SEE [SECTION 4](#).

	0	ROOF BARRIERS:	WALL BARRIERS:	1.5
	REFER TO NOTES	EPDM OR TPO	BARRITECH, BARRISEAL OR BARRITHANE	
REFER TO SPECS FOR ADDITIONAL INFORMATION				