


INSTALLATION STEPS:

1. INSTALL VapAir SEAL 725TR OR MD, EXTENDING IT OVER PRIMED CCW 705 OR 705FR-A A MINIMUM OF 3" (76mm). REMOVE RELEASE LINER AND PRESS VapAir SEAL TO 705 USING HAND PRESSURE.
2. ROLL ENTIRE OVERLAP USING A 2" HAND ROLLER TO REMOVE AIR POCKETS AND TO ENSURE FULL ADHESION


CCW CONTACT ADHESIVE OPTIONS	
• 702	• 715
• 702 WB	• CAV-GRIP
• 702 LV	• TRAVEL-TACK

ROOF A&VB OPTIONS	
• VapAir Seal 725 TR	
• VapAir Seal MD	

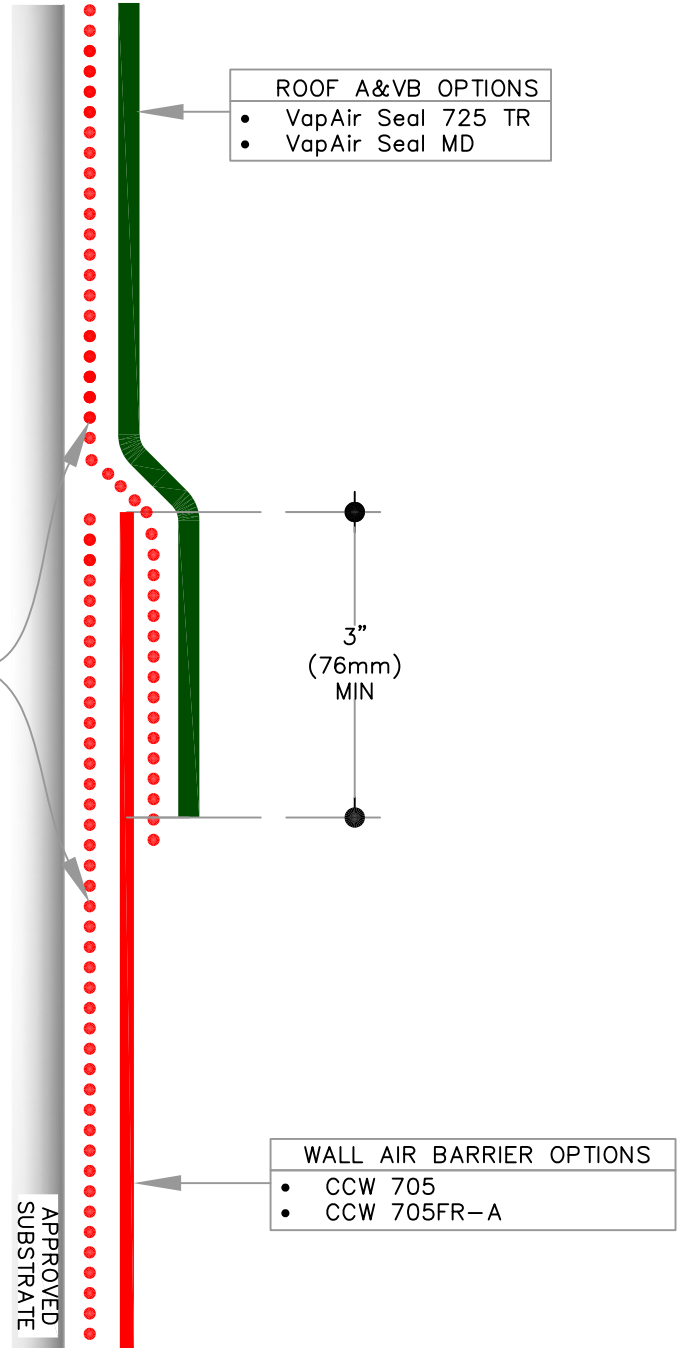

WALL AIR BARRIER OPTIONS	
• CCW 705	
• CCW 705FR-A	

THIS DETAIL DEPICTS PRODUCTS COMPATIBILITY ONLY. FOR COMPLETE ROOF-TO-WALL TIE-IN, PLEASE SEE [SECTION 4](#).

	<div style="border: 1px solid black; padding: 2px; display: inline-block;">0</div> REFER TO NOTES	ROOF BARRIERS:	WALL BARRIERS:	1.7
		VapAir SEAL 725TR OR MD	705 OR 705FR-A	
REFER TO SPECS FOR ADDITIONAL INFORMATION				