


INSTALLATION STEPS:

1. APPLY A CONTINUOUS BEAD OF CCW LM-800XL OR CCW 704 MASTIC AT MIRADRI 860/861 STEP-OFF. MASTIC SHALL BE TOOLED TO A MINIMUM OF 1" WIDE AT 40 MILS THICK. ALLOW TO SET UP ACCORDING TO SPECIFIC PRODUCT INSTALLATION INSTRUCTIONS.
2. LAP MIRAFLAY PANEL ONTO THE MIRADRI 860/861 A MINIMUM OF 6" (153mm).
3. USING TERMINATION BAR AND APPROVED MECHANICAL FASTENERS SPACED 12" (305mm) ON CENTER, SECURE MIRAFLAY PANEL IN PLACE. MIRAFLAY PANEL SHALL EXTEND COMPLETELY BELOW THE TERMINATION BAR TO ENSURE A TOTAL COMPRESSION SEAL BETWEEN IT AND THE MIRADRI MEMBRANE.
4. APPLY MIRAFLAY SEALANT TO COMPLETELY COVER TERMINATION BAR AND FASTENERS, AND TOOLED TO CREATE A SMOOTH TRANSITION AT STEP-OFF.

CCW CONTACT ADHESIVE OPTIONS	
• 702	• 715
• 702 WB	• CAV-GRIP
• 702 LV	• AWP

BELOW GRADE WATERPROOFING OPTIONS
• MIRADRI 860/861

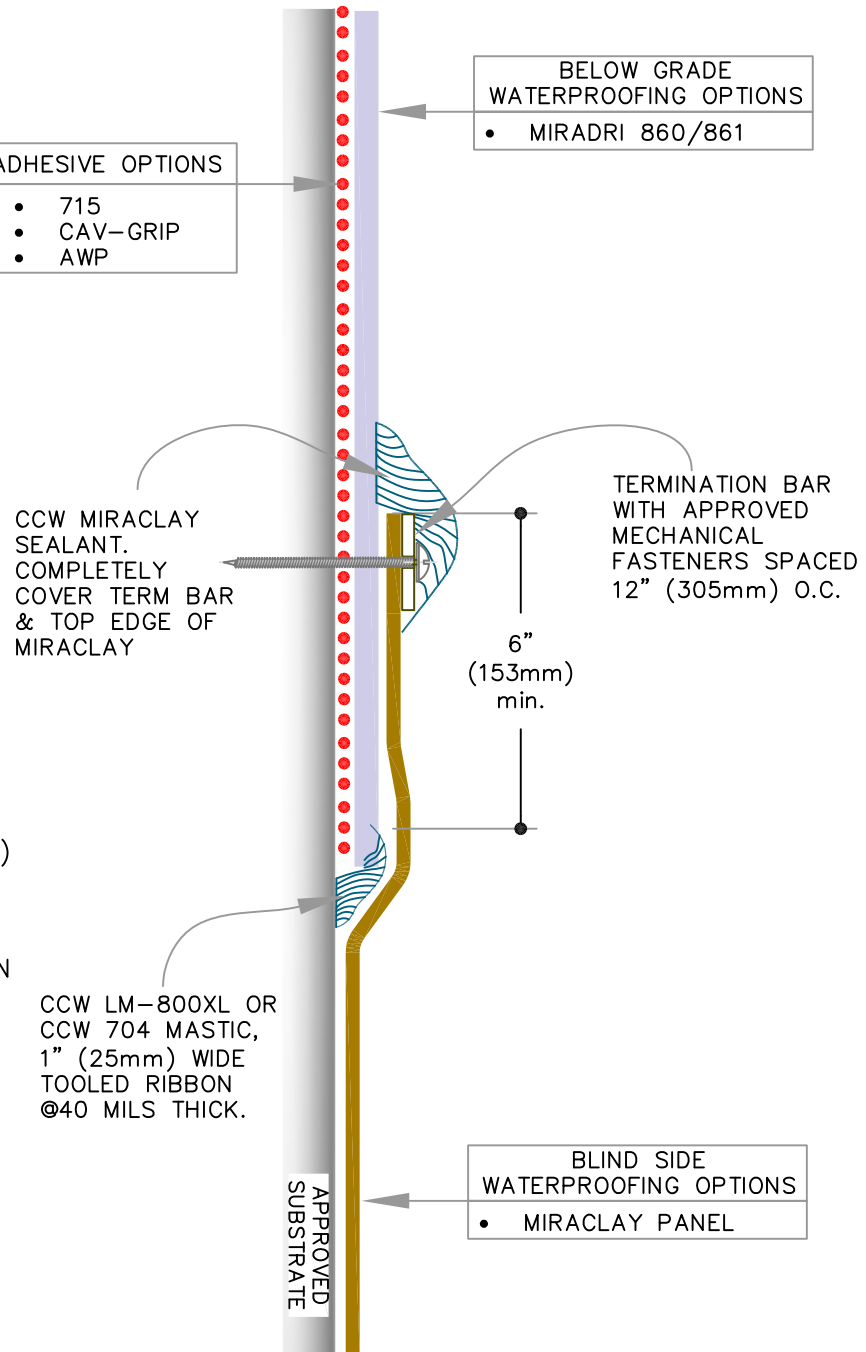

CCW MIRAFLAY SEALANT. COMPLETELY COVER TERM BAR & TOP EDGE OF MIRAFLAY


TERMINATION BAR WITH APPROVED MECHANICAL FASTENERS SPACED 12" (305mm) O.C.

6" (153mm) min.

CCW LM-800XL OR CCW 704 MASTIC, 1" (25mm) WIDE TOOLED RIBBON @40 MILS THICK.

BLIND SIDE WATERPROOFING OPTIONS
• MIRAFLAY PANEL

THIS DETAIL DEPICTS PRODUCTS COMPATIBILITY ONLY. FOR COMPLETE ROOF-TO-WALL TIE-IN, PLEASE SEE [SECTION 6.](#)

	<div style="border: 1px solid red; padding: 2px; display: inline-block;">0</div> REFER TO NOTES	BELOW GRADE BARRIERS:	BLIND SIDE BARRIERS:	3.2
		MIRADRI 860/861	MIRAFLAY	
REFER TO SPECS FOR ADDITIONAL INFORMATION				