


INSTALLATION STEPS:

1. APPLY 6" WIDE MIRAPLY SEAM TAPE AT STEP-OFF OF MIRAPLY MEMBRANE. TAPE SHALL EXTEND 5" (127mm) ONTO MIRAPLY AND 1" (26mm) ONTO SUBSTRATE TO CREATE A SMOOTH TRANSITION. NOTE: TAPE DOES NOT REQUIRE PRIMER FOR ADHESION BUT MEMBRANE MUST BE CLEAN, WHICH MAY REQUIRE THE USE OF WEATHERED MEMBRANE CLEANER.
2. APPLY BARRICOAT OR MIRASEAL, EXTENDING IT OVER THE MIRAPLY SEAM TAPE AND CONTINUING IT A MINIMUM OF 1/2" (13mm) ONTO THE MIRAPLY MEMBRANE.

MIRAPLY SEAM TAPE APPLIED TO CLEANED SEAM AREA

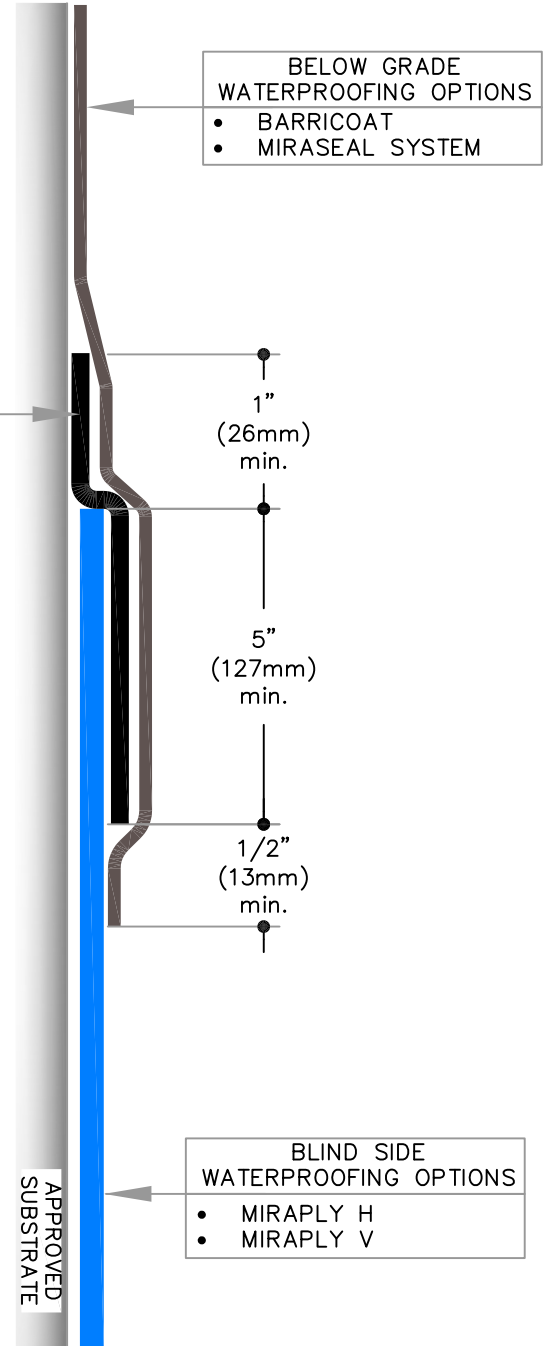

THIS DETAIL DEPICTS PRODUCTS COMPATIBILITY ONLY. FOR COMPLETE ROOF-TO-WALL TIE-IN, PLEASE SEE [SECTION 6.](#)

	<p>0</p> <p>REFER TO NOTES</p>	BELOW GRADE BARRIERS:	BLIND SIDE BARRIERS:	<p>3.3</p>
		<p>BARRICOAT OR MIRASEAL</p>	<p>MIRAPLY H OR V</p>	
<p>REFER TO SPECS FOR ADDITIONAL INFORMATION</p>				