
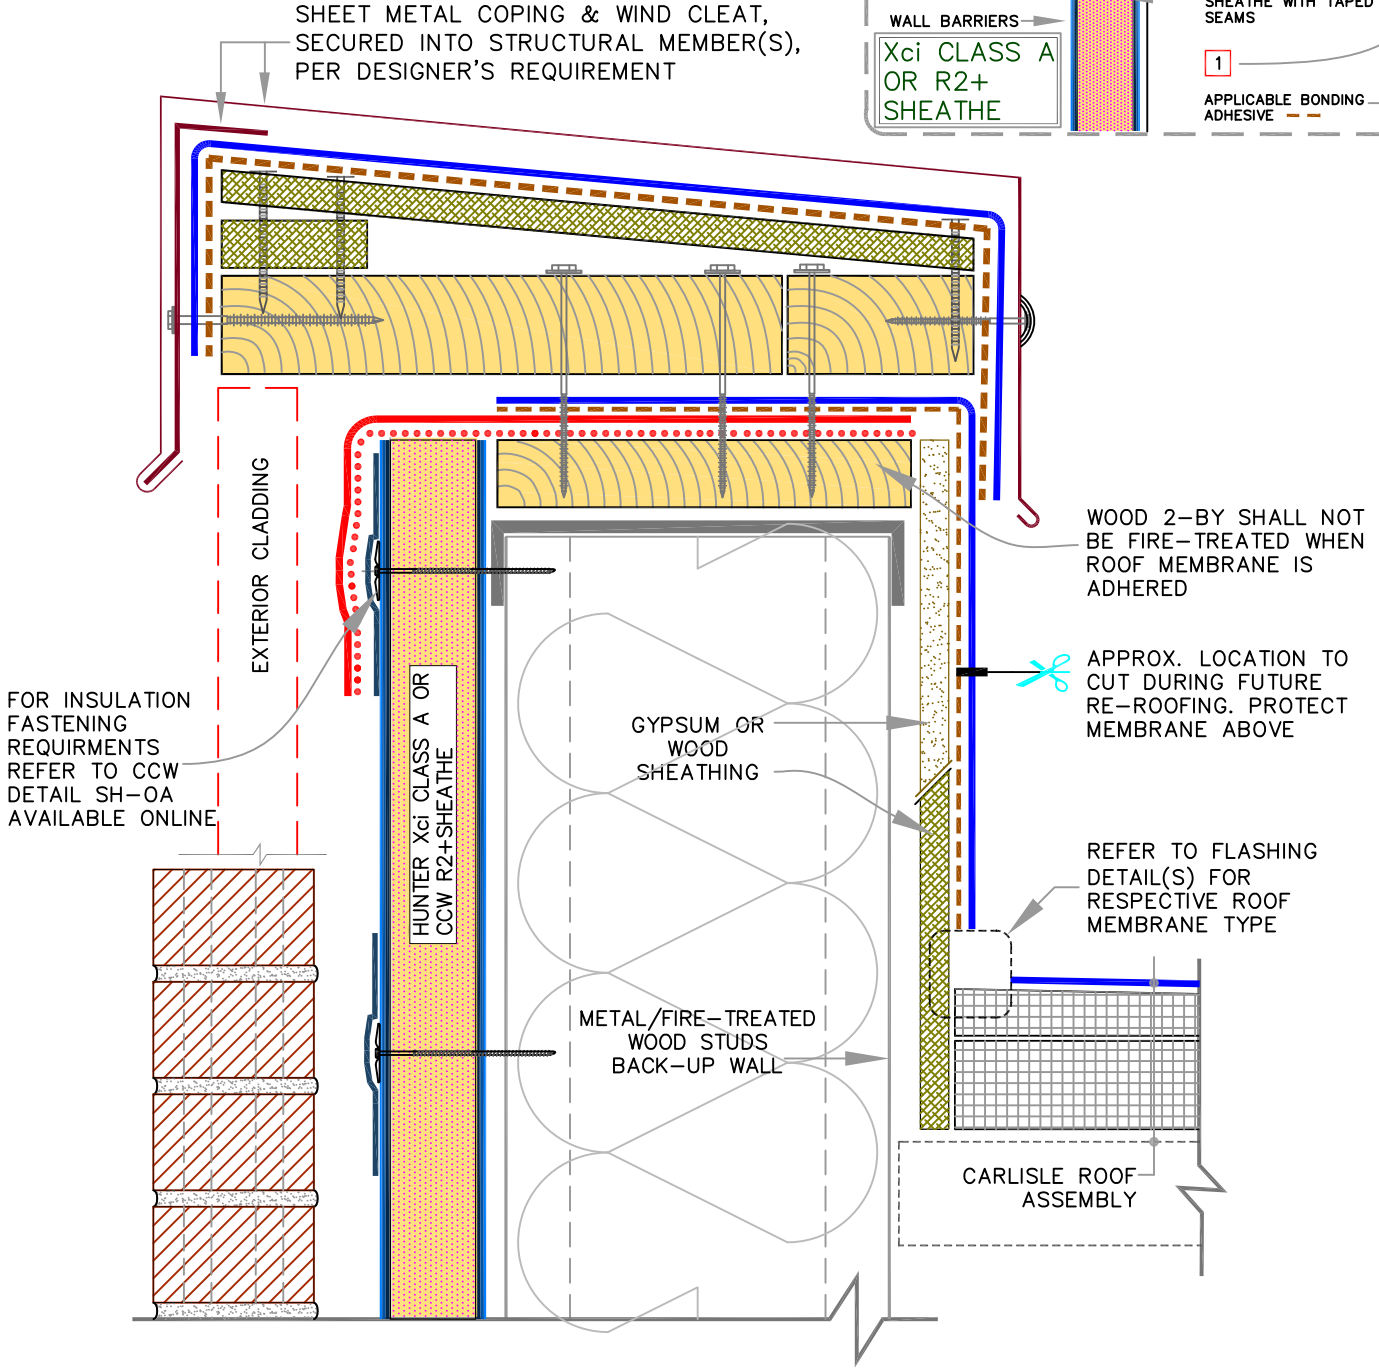


NVELOP TIE-IN DETAILS

NOTES:

- 1 IF ROOF MEMBRANE IS PVC OR KEE HP, INSTALL CCW MIRAPLY DETAIL TAPE CENTERED OVER 705FR-A STEP OFF. MIRAPLY DETAIL TAPE WILL PREVENT CONTACT OF ASPHALT ADHESIVE TO PVC/KEE HP MEMBRANE.

SHEET METAL COPING & WIND CLEAT, SECURED INTO STRUCTURAL MEMBER(S), PER DESIGNER'S REQUIREMENT

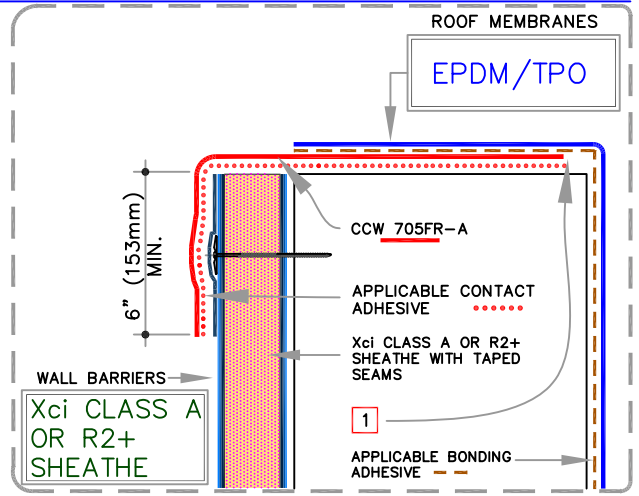

	<p>0</p> <p>REFER TO NOTES</p>	<p>ROOF BARRIERS:</p> <p>EPDM OR TPO</p>	<p>WALL BARRIERS:</p> <p>Xci CLASS A OR R2+ SHEATHE</p>	<p>4.12</p>
		<p>REFER TO SPECS FOR ADDITIONAL INFORMATION</p>		