



NVELOP TIE-IN DETAILS


NOTES:

- 1 CCW MIRAPLY DETAIL TAPE TO COVER 705FR-A STEP-OFF. TAPE MUST EXTEND 1" (26mm) BEYOND 705FR-A STEP-OFF ON TO SUBSTRATE.
- 2 PVC/KEE HP MUST NOT EXTEND PAST THE END OF CCW MIRAPLY DETAIL TAPE

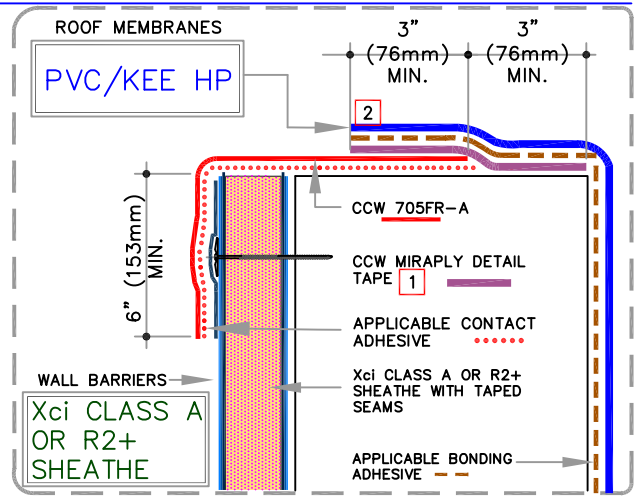

SHEET METAL COPING & WIND CLEAT, SECURED INTO STRUCTURAL MEMBER(S), PER DESIGNER'S REQUIREMENT

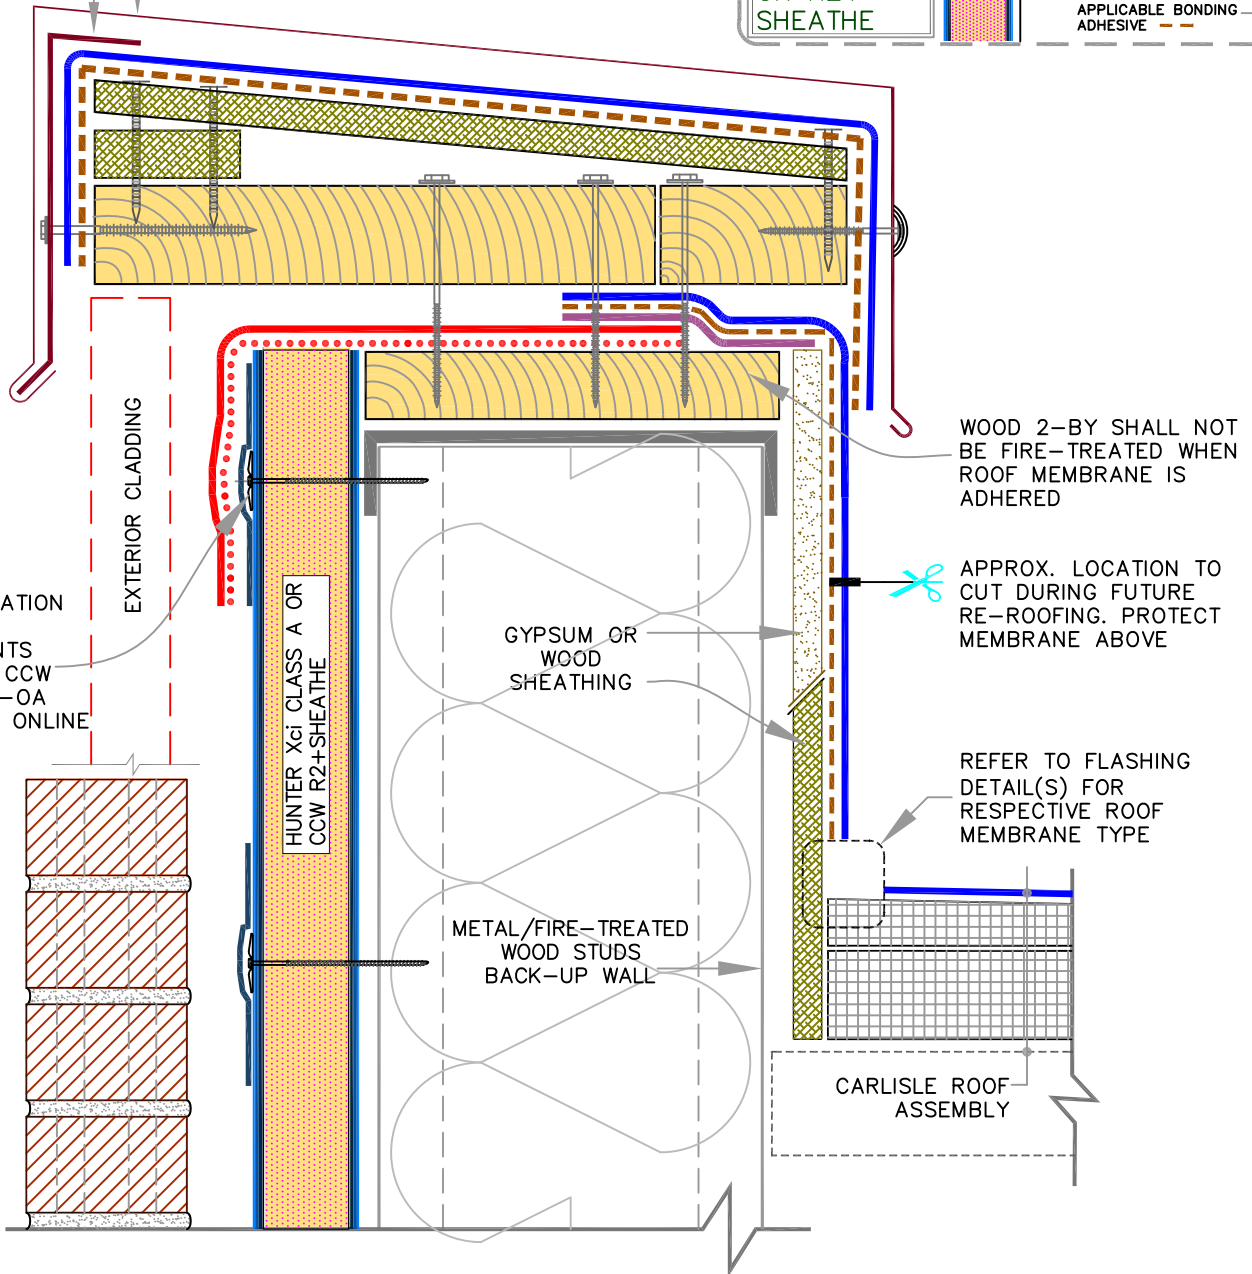

	0	ROOF BARRIERS:	WALL BARRIERS:	4.13
	REFER TO NOTES	PVC OR KEE HP	Xci CLASS A OR R2+ SHEATHE	
REFER TO SPECS FOR ADDITIONAL INFORMATION				